





PRINTING AND FITTING
INSTRUCTIONS

- 1. Print this document on A4 sheets of paper (21 x 29.7 cm).
- 2. Ensure you print at 100% scale.
- 3. Measure both sides of this box to check the scale is correct.
- 4. Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- 5. Tape the sheets together and cut around the pack's outline.
- 6. When fitting this printed template to your bike, keep in mind that the fit will be somewhat flexible as the product is built from fabric.

10 cm
3.9 in

10 cm / 3.9 in

SCALED EXAMPLE
OF FINAL TEMPLATE

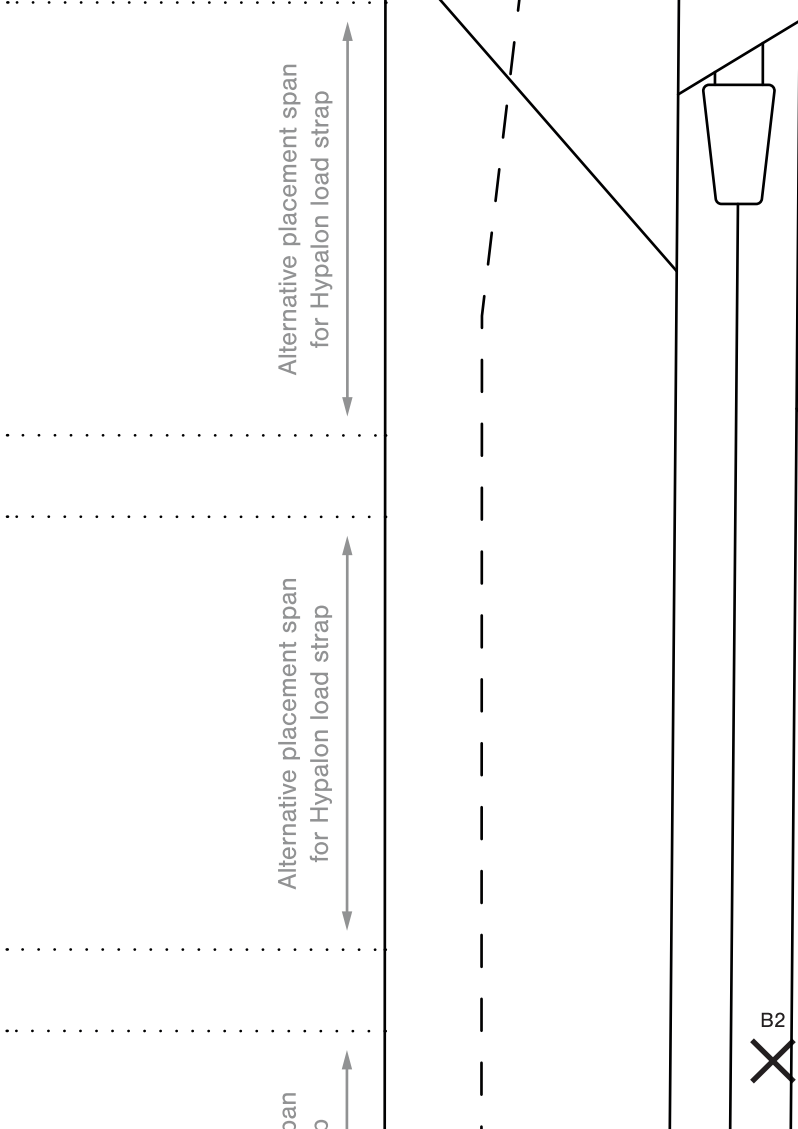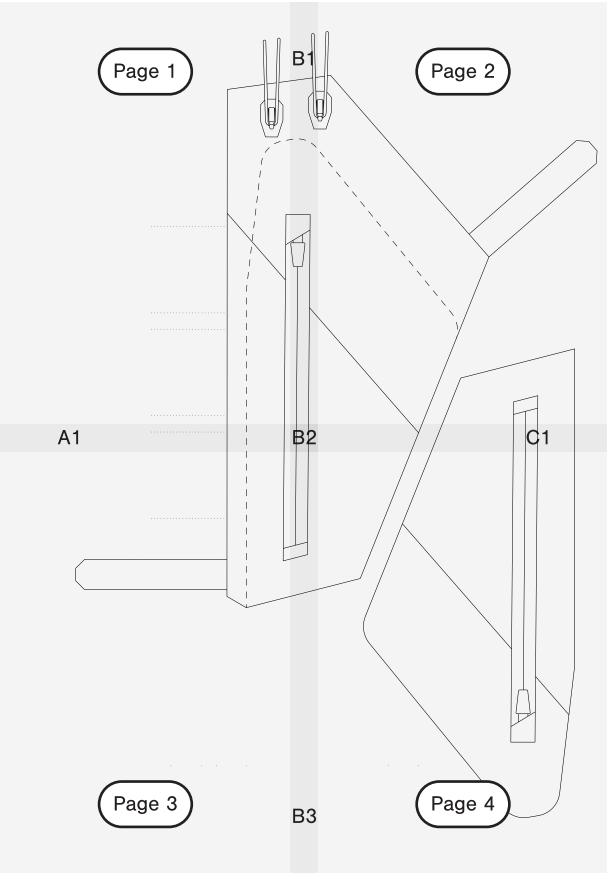





B1

AERO
FRAME MODULE

Page 2


M

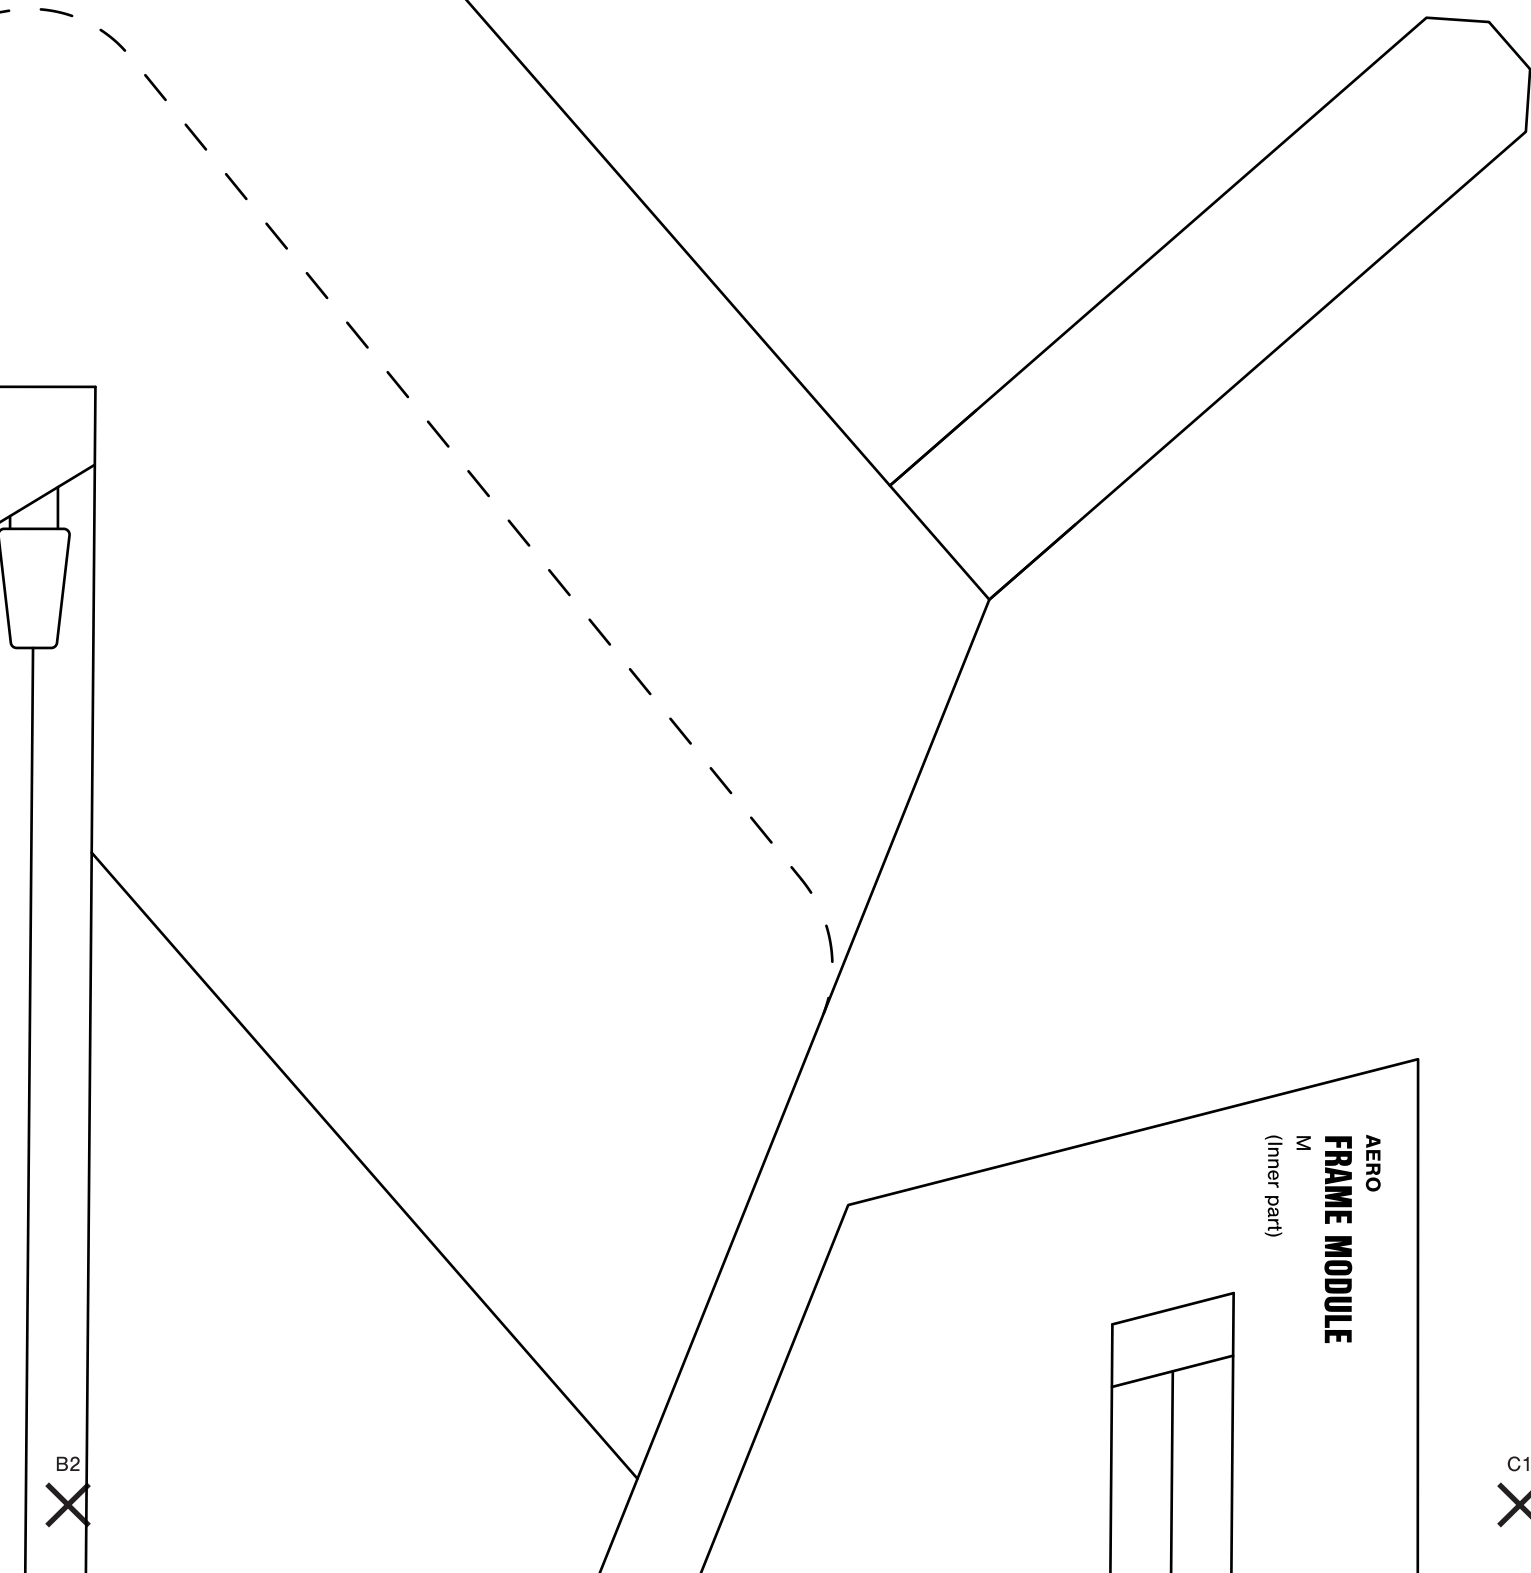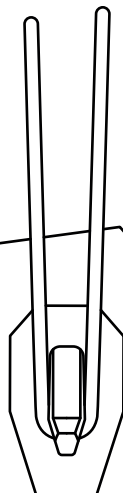

B2





AERO
FRAME MODULE
M
(inner part)

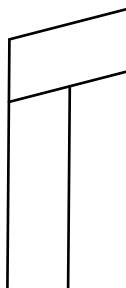

C1



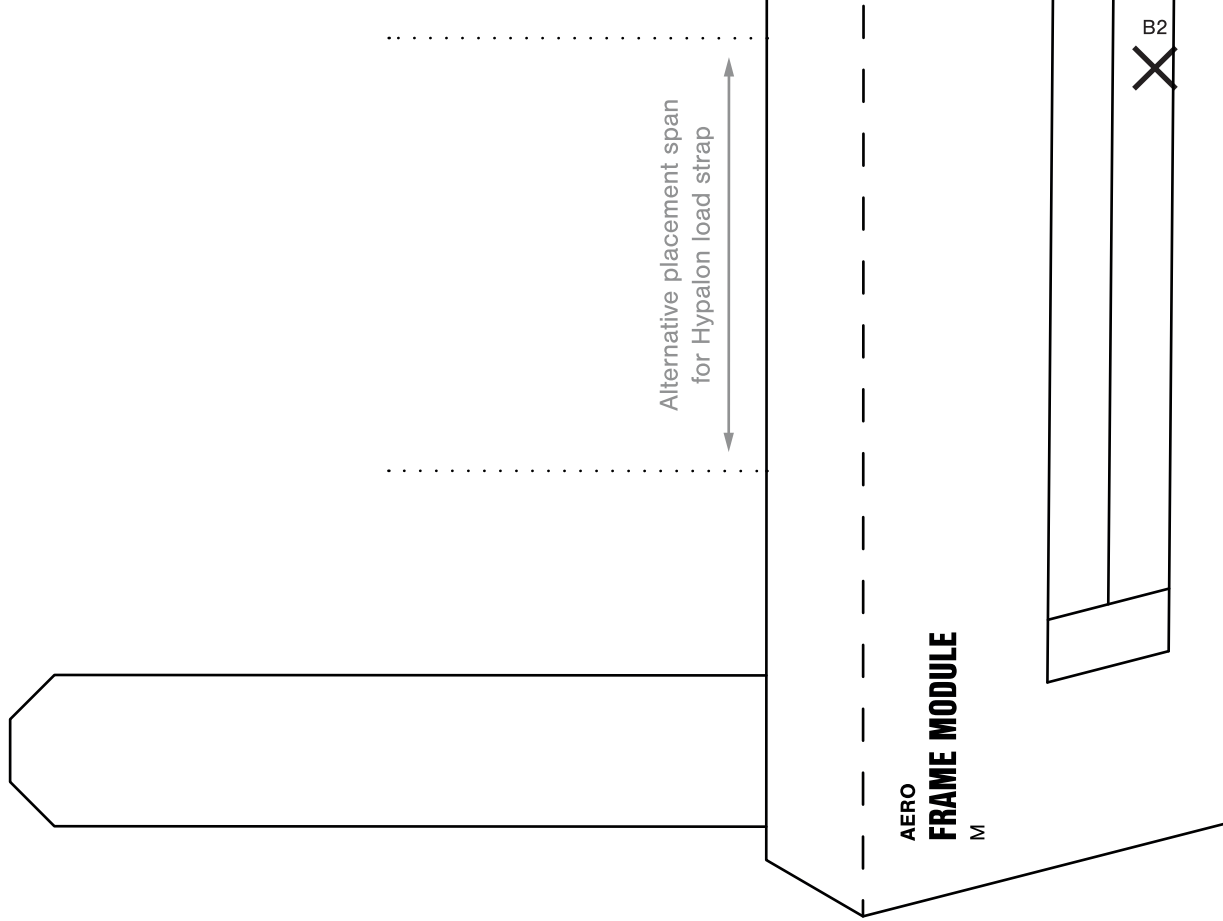

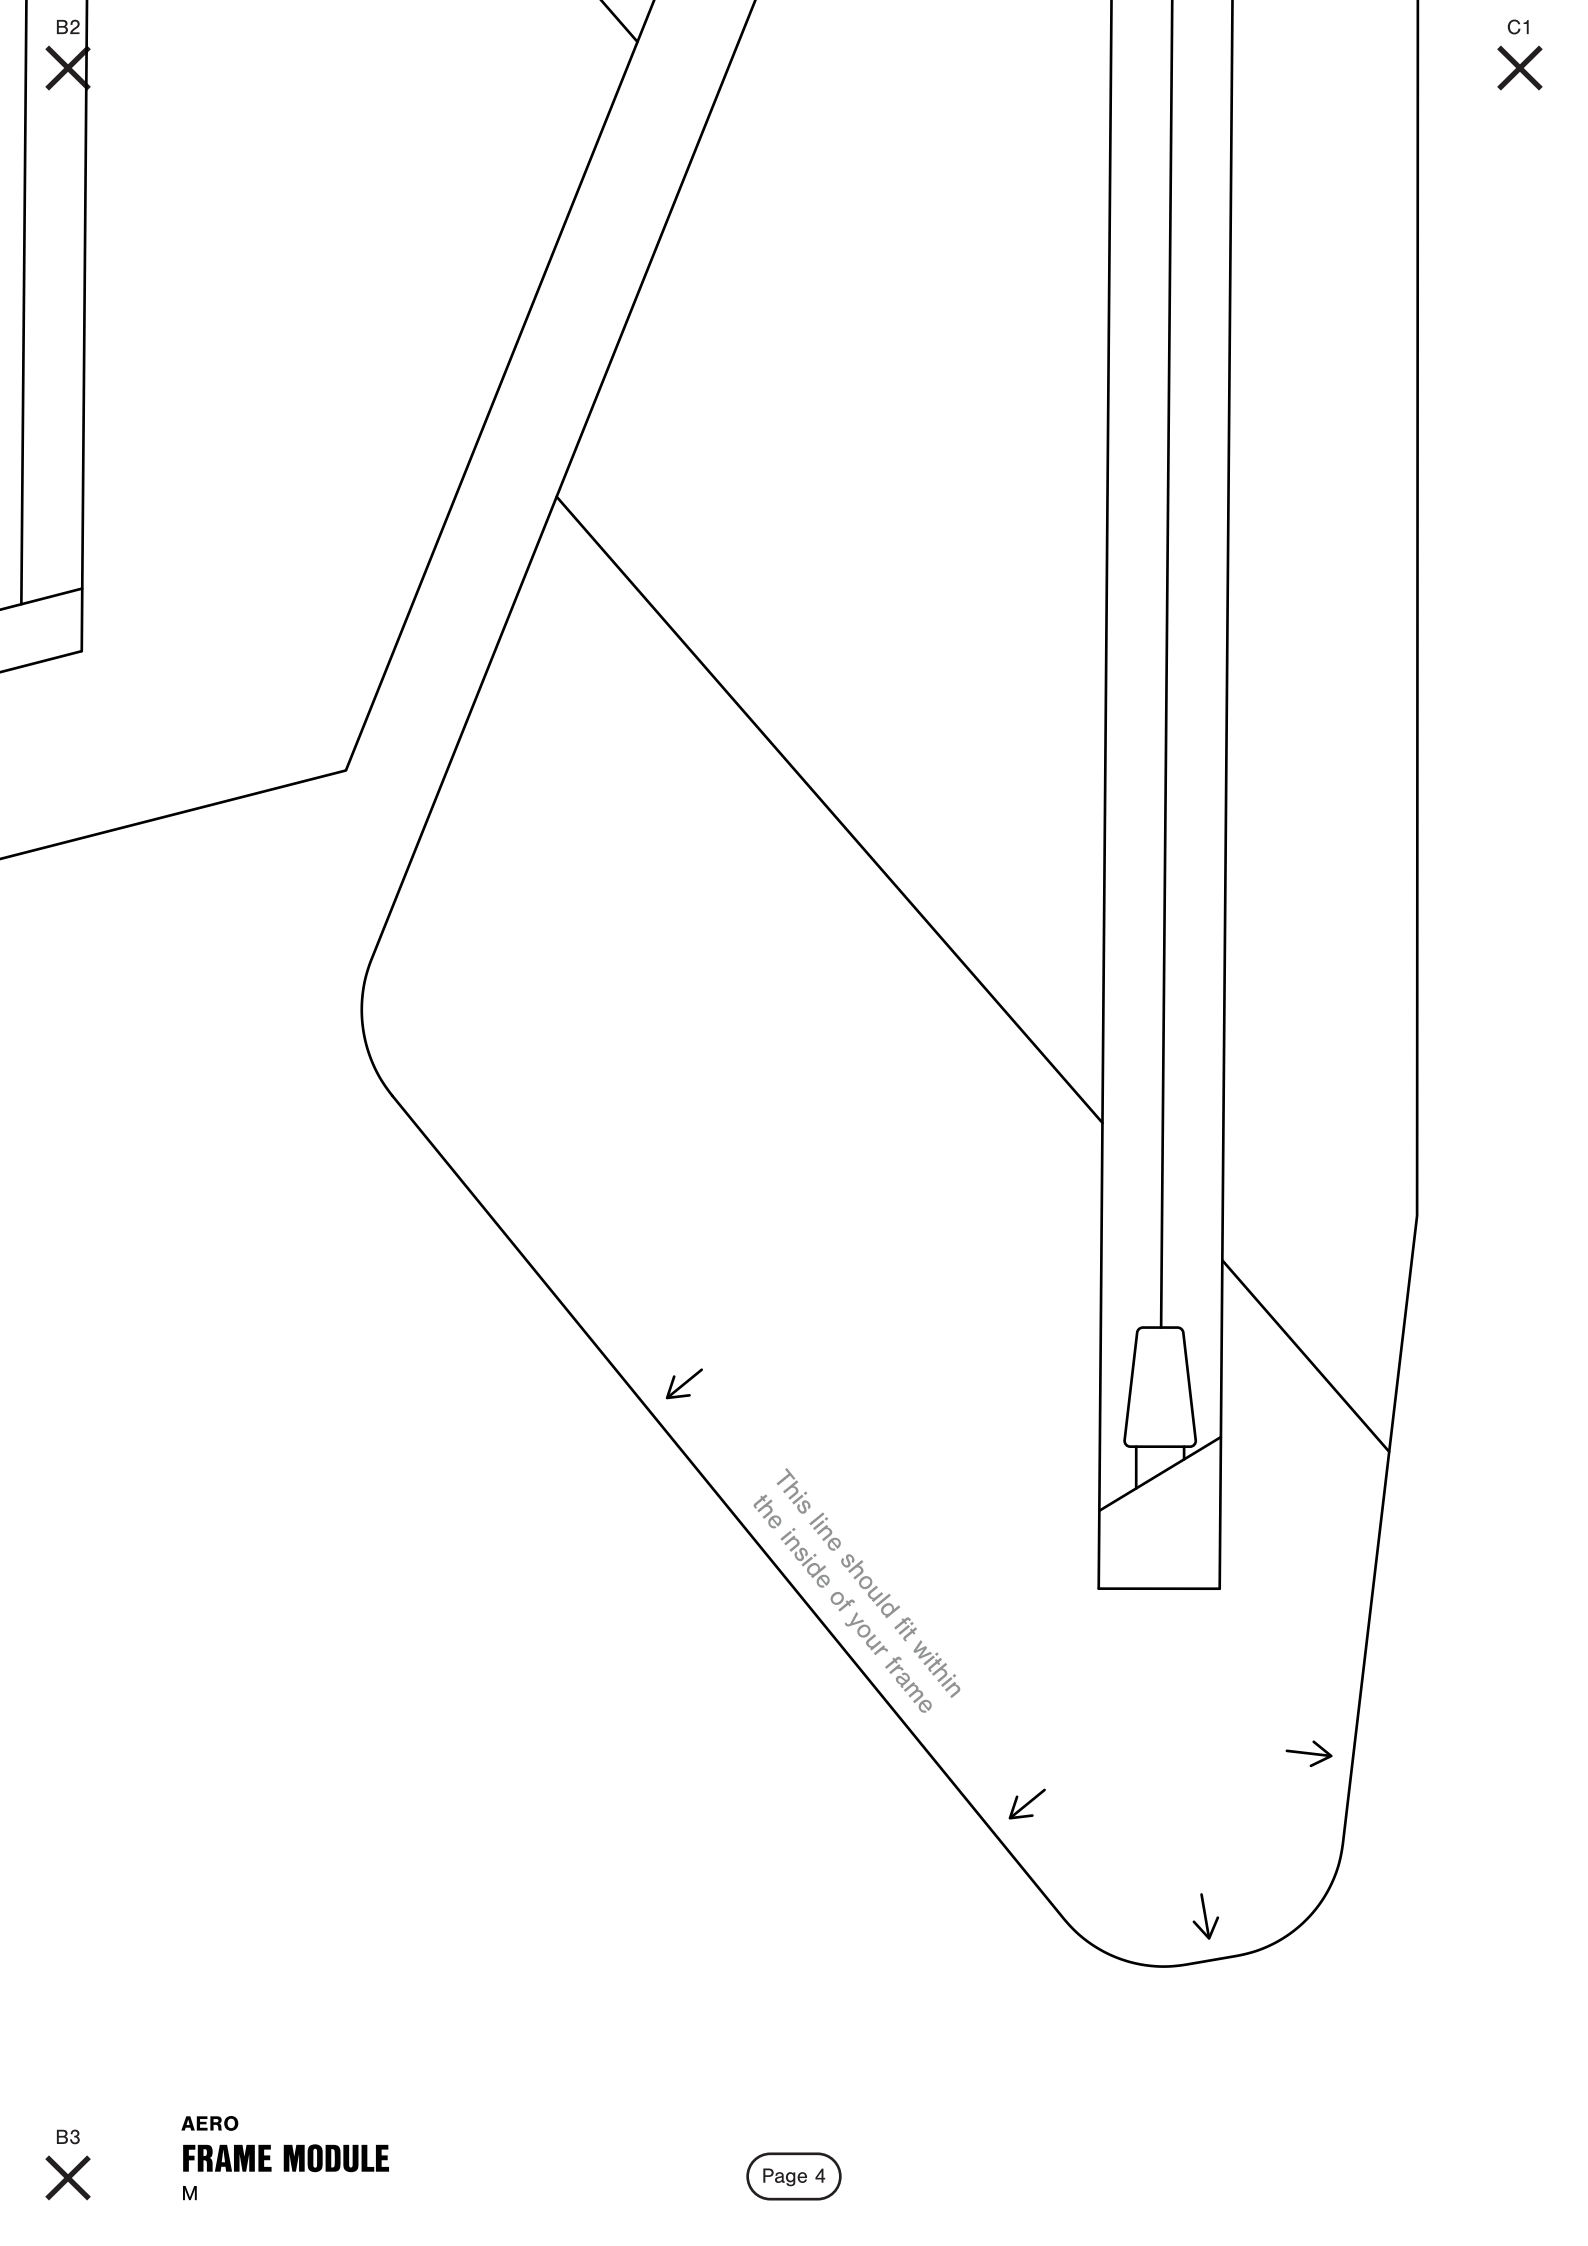

B2



C1



This line should fit within
the inside of your frame



B3

